



MOBILEDETECT

Fentanyl Test Strip

[FYL] Fentanyl Test Strip


Ultra-sensitive, nanogram-level detection test strip.

Safely test packaging material, surfaces, pills and powders.

Easy to use with rapid, clear results in seconds.

Enhances [MDT] Multi-Drug Test or use solely for fentanyl detection.


Create instant result reports with the FREE MobileDetect App.

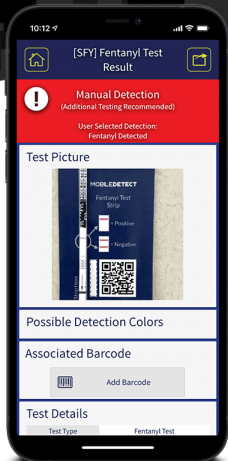

Easy Report Generation

- Time and date details
- Test pictures for evidence
- Section for officer notes
- GPS mapping of test location

Easy to Interpret

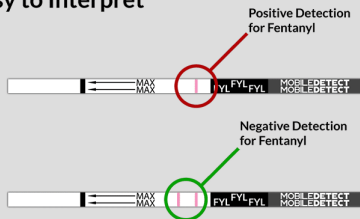

DETECTACHEM

www.DetectaChem.com
855-573-3537

Trace Fentanyl Detection

1 Safer Sampling

MobileDetect Fentanyl Test Strips require significantly less sample for a positive detection. Users can sample the outside of bags and pills, keeping possible fentanyl exposures to an absolute minimum.

2 Fast, Accurate Results

Fentanyl Test Strips can be run in a matter of minutes. This quick, nanogram-level detection gives response teams the immediate info they need to handle any situation.



How to Run a Test

 <p>MOBILEDETECT Fentanyl Test Strip</p> <p>Test Strip Quick Start Instructions</p> <p>www.DetectaChem.com</p>	<p>1. Wet swab tip by dipping swab into buffer tube</p> 	<p>2. Swab substance</p> 	<p>3. Insert swab into tube</p>  <p>Wait 15 seconds.</p>
<p>4. Insert test strip into tube</p>  <p>Wait 15 seconds.</p>	<p>5. Remove test strip from tube and lay on analysis area</p> 	<p>6. Use analysis chart to determine test result</p>  <p>One line indicates a positive result. Two lines indicate a negative result.</p>	<p>7. Use MobileDetect App for automated reports *Optional*</p> 

“Easily the best fentanyl test on the market for the price. We have some for every officer, and it gives us that added layer of safety we need.”

Scan here for more info!



DETECTACHEM